


Optional relay, if GND active for Dump

- To Ignition Orange- relay position 30 —
- Dumping Signal- relay pos 85 —
- To Ignition Orange- relay position 86 —
- To Hub Mini Black (din)- relay pos 87 —

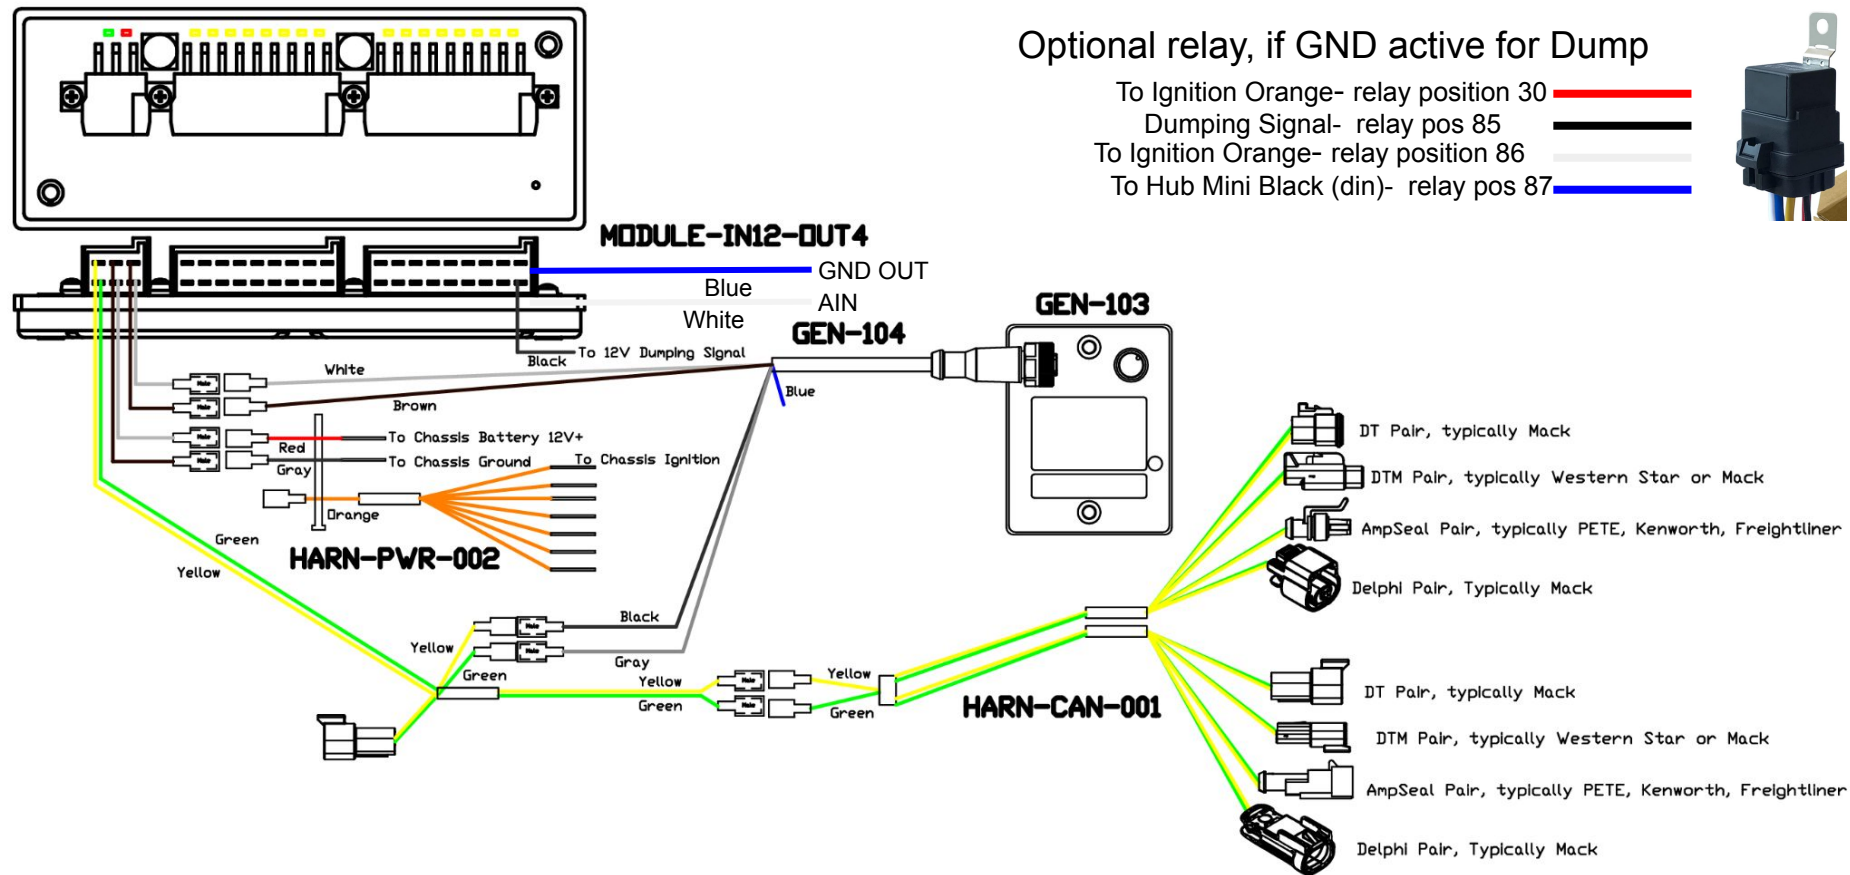

Sensor Base Dump Truck