


**HARN-CAN-001**

**GEN-103**

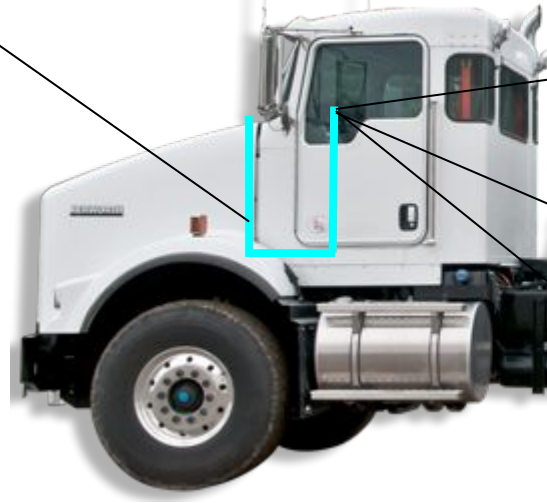

**GEN-110**




**GEN-101**

**GEN-104**



**Notes:**

1. These are the typical connector types for the CAN connection. Model/make/year may affect this, so use the pair of connectors that fits your chassis.
2. Typically CAN connectors are located firewall forward, center dash, behind steering wheel, or near drivers left foot.
3. Use only 1 pair of connectors. And make sure to plug the non-used paired together.

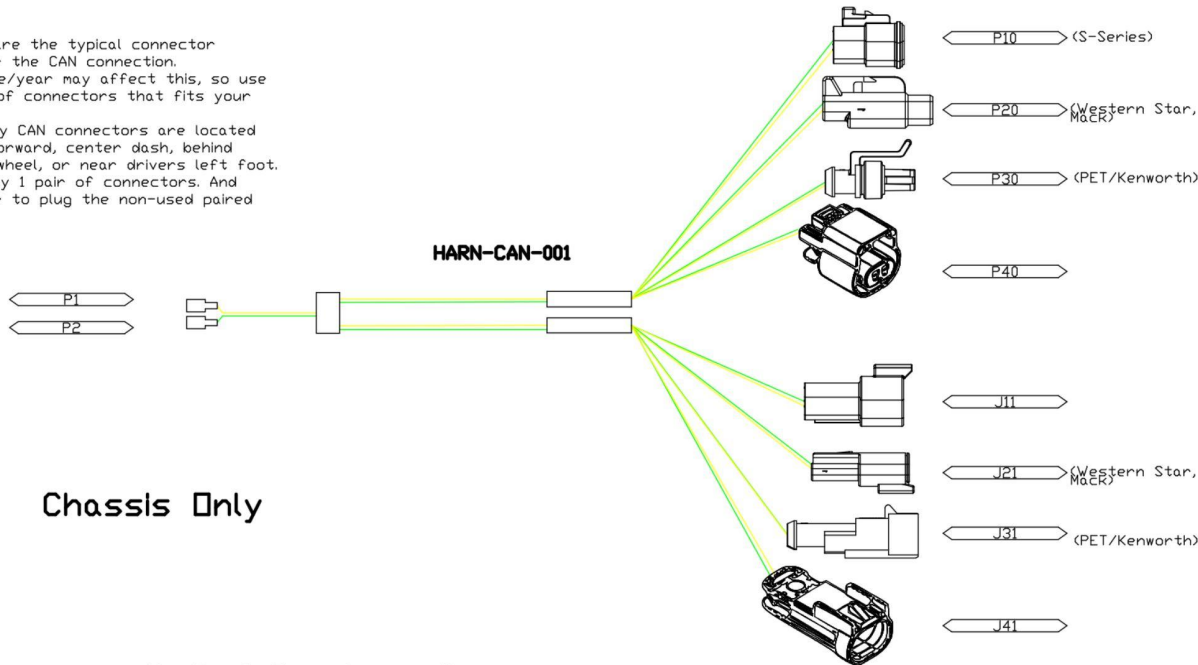

**Chassis Only**

