

# Chassis CAN and Power Connections


This section shows the typical Chassis CAN (Mixer CAN, if applicable) and Power connection locations for the truck types listed below.

<b>Chassis CAN and Power Connections .....</b>	<b>1</b>
Rear Discharge Mixers .....	2
Peterbilt – 2016 or newer .....	2
Kenworth – 2016 or newer .....	3
Kenworth or Peterbilt – 2008–2015 .....	4
Mack Granite.....	5
Western Star – 2022 or older.....	6
Freightliner – 2020–2022 (M2 114).....	7
Freightliner/Western Star – 2023 or newer .....	8
International HX – 2022 or newer .....	9
Front Discharge Mixer .....	10
Terex Advance – 2019 or newer.....	10
Terex Advance – 2016–2019 (no Mixer CAN) .....	11
Terex Advance – 2016 or older (no Mixer CAN) .....	12
Oshkosh S Series Flex 2.0 .....	13
Oshkosh S Series Non Flex – (no Mixer CAN).....	14
Oshkosh S Series Non Flex – Glider (no Chassis/Mixer CAN) .....	15

## Diagram Reference

Each truck type shows a quick reference diagram indicating connector locations.

**\*(H) HUB/Bridge** recommended mounting location—choosing a location drastically different may require additional parts or custom harnessing.

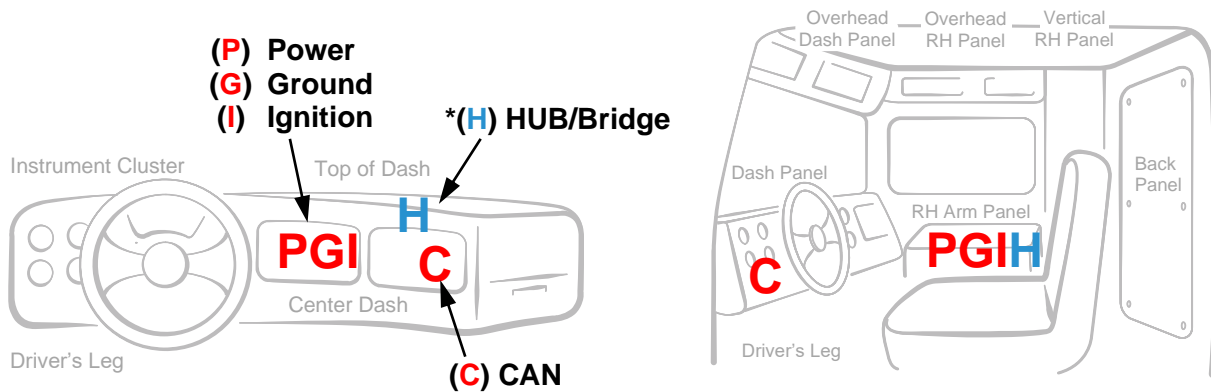

**Rear Discharge Dash View**

**Front Discharge Cab View**


# Rear Discharge Mixers

## Peterbilt – 2016 or newer


(H) Hub/Bridge typical mounting location.

### Chassis CAN and Power Connections:


**(C) CAN: KCAN (250K)**  
AmpSeal Connector

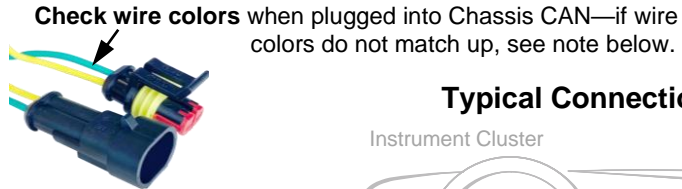

**(P) Power, (G) Ground, (I) Ignition**  
Splice Block, Terminal

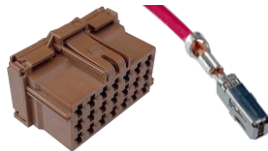


### Typical Connection Locations

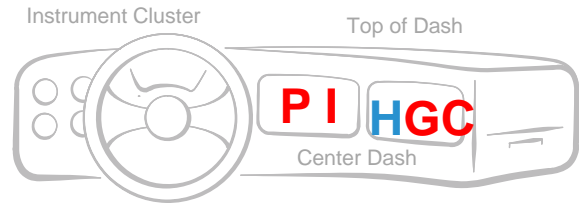

See image references below.

**Look carefully**—connectors may be hidden or wrapped in a group of wires (connectors are labeled).

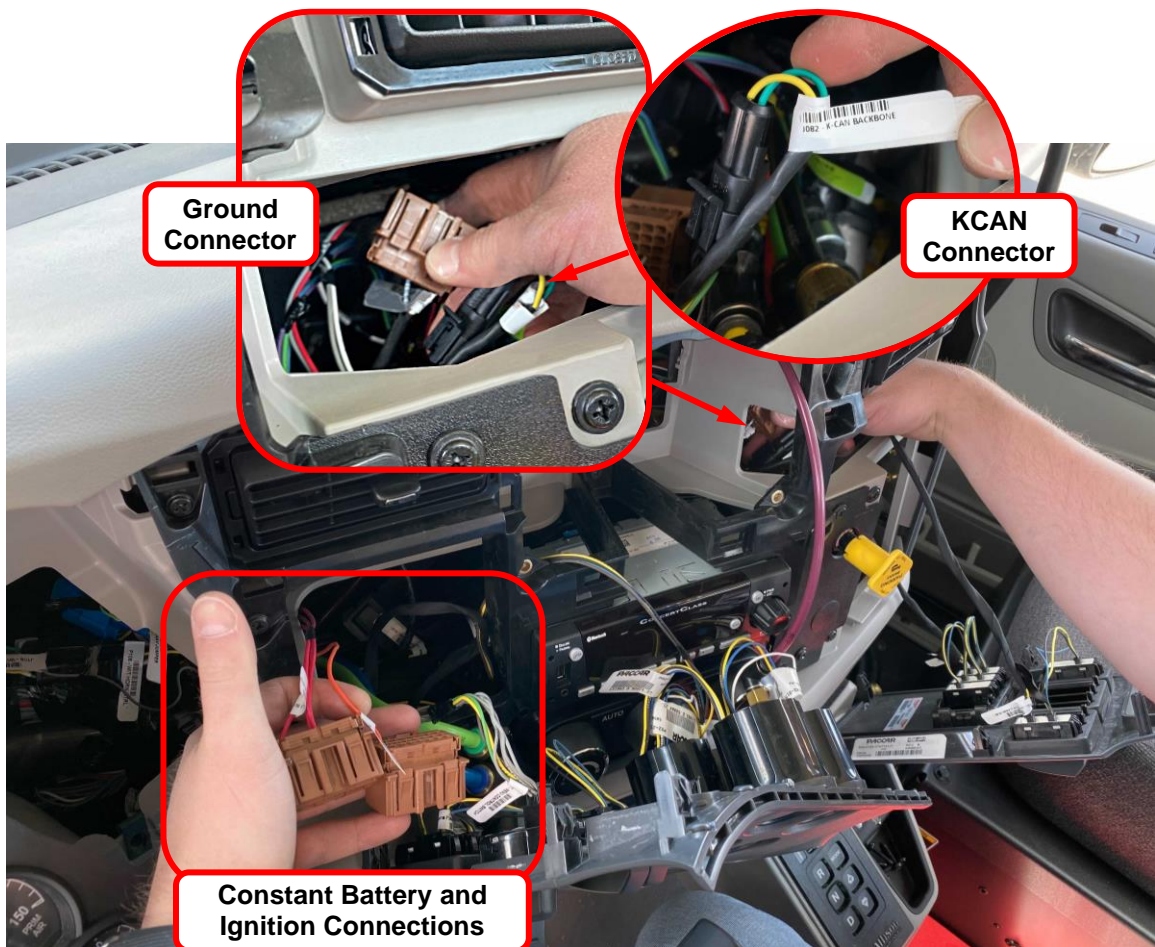


**Note:** Some Kenworth and Peterbilt Chassis (Paccar trucks) have switched the green and yellow wires in the CAN connector. For this scenario, swap the green and yellow wires at the Hub (the N2-3 and N2-4 positions).

## Kenworth – 2016 or newer


(H) Hub/Bridge typical mounting location.

### Chassis CAN and Power Connections:


**(C) CAN: KCAN (250K)**  
AmpSeal Connector

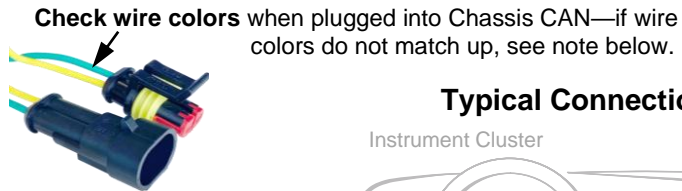

**(P) Power, (G) Ground, (I) Ignition**  
Splice Block, Terminal

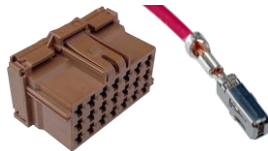

### Typical Connection Locations

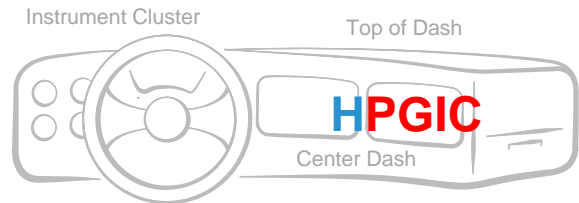

See image references below.

**Look carefully**—connectors may be hidden or wrapped in a group of wires (connectors are labeled).



**Note:** Some Kenworth and Peterbilt Chassis (Paccar trucks) have switched the green and yellow wires in the CAN connector. For this scenario, swap the green and yellow wires at the Hub (the N2-3 and N2-4 positions).



## Kenworth or Peterbilt – 2008–2015

**(H) Hub/Bridge** typical mounting location.

### Chassis CAN and Power Connections:


**(C) CAN: VCAN** (250K or 500K)  
AmpSeal Connector

Check wire colors when plugged into Chassis CAN—if wire colors do not match up, see note.




**Note:** Some Kenworth and Peterbilt Chassis (Paccar trucks) have switched the green and yellow wires in the CAN connector. For this scenario, swap the green and yellow wires at the Hub (the N2-3 and N2-4 positions).


### Typical Connection Locations

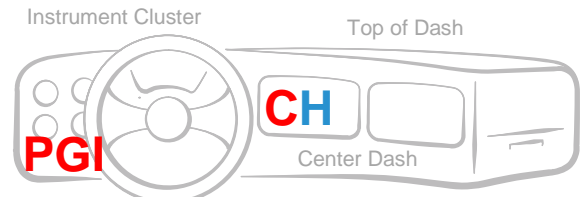

**(P) Power, (G) Ground, (I) Ignition**  
Possible Connector Types:

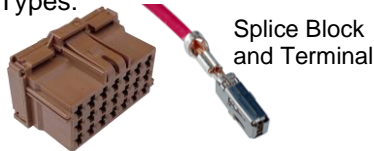

See image references below.

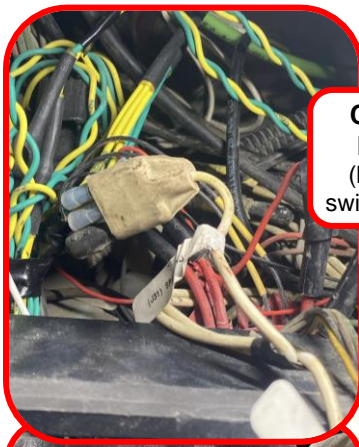


**Constant Battery, Ignition, Ground**  
(behind or above key switch; check wire labels)



**VCAN Connector**

**Look carefully**—connectors may be hidden or wrapped in a group of wires (connectors are labeled).

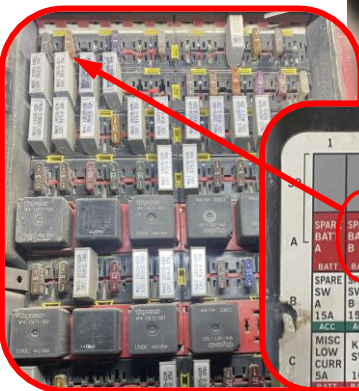

	1	2	3	4	5	6	7	8	9	10	11	12
A	SPAR BATT	SPARE BATT	SPARE BATT	SPARE BATT	SPARE BATT	SPARE BATT	SPARE BATT	ACC FEED	SPARE ACC	SPARE ACC	SPARE ACC	
B	BATT A	BATT B	BATT C	BATT D	BATT E	BATT F	BATT G	IGN A	IGN B	IGN C	IGN D	IGN
C	MISC SW	FLOOD SW	FOG LMP	FOG LMP	HOT LINE	CAB MKR	SIGN LMP	SPOT LMP	WIPR PARK	RH LMP	LH DR DOOR	ABS LOCK

THIS SECTION OF CENTRAL ELECTRICAL PANEL BEHIND INSTRUMENT PANEL

**WARNING!** REFER TO OPERATOR MANUAL OR CONTACT AN AUTHORIZED RV DEALER, PRIOR TO SERVICING THE CIRCUITS MARKED WITH

**To use a bullet terminal**, add a 5-amp fuse to the wire's matching slot in the fuse box.

Fuse Box located by driver's leg.


**i.e.:** If power wire label shows Spare Batt B; use fuse box label to find Spare Batt B fuse slot—install a 5-amp fuse.

## Mack Granite

**(H) Hub/Bridge** typical mounting location.

### Chassis CAN and Power Connections:

**(C) CAN: VCAN (250K); Possible Connector Types:**

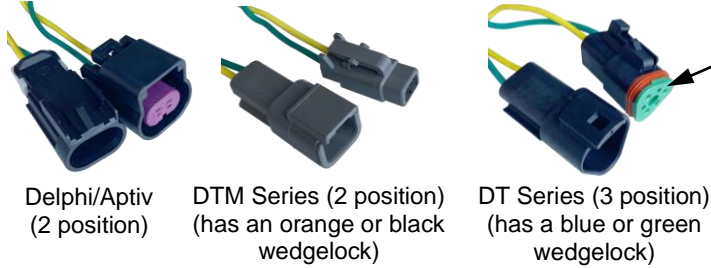


**Wedgelock**—for DT or DTM Series, see color note below.

**(P) Power, (G) Ground, (I) Ignition**  
#10 Ring Terminal/Stud




### Typical Connection Locations

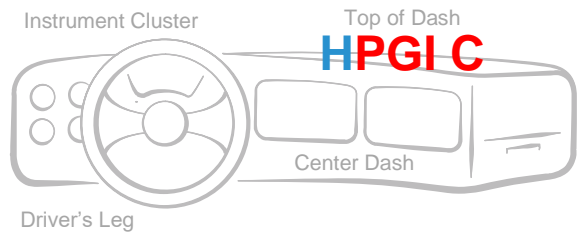

See image references below.

**Look carefully**—connectors may be hidden or wrapped in a group of wires (connectors are labeled).

**Various Model Years** shown in examples below.

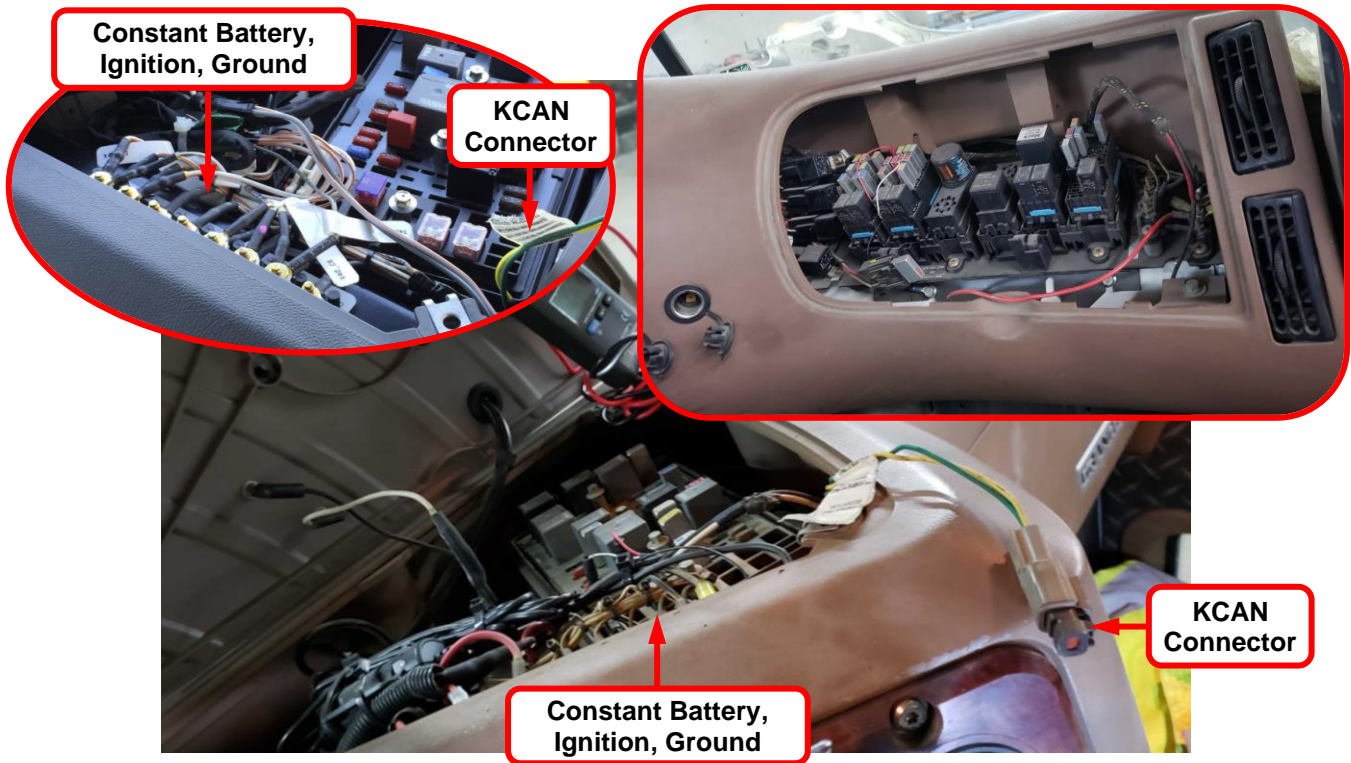

**Note:** Wedgelock colors must match to connect. **If colors do not match**—remove one wedgelock from the kit harness and switch it with the wedgelock on the chassis CAN harness, then matching colors will connect.

## Western Star – 2022 or older

**(H)** Hub/Bridge typical mounting location

**Chassis CAN and Power Connections:**


**(C) CAN: VCAN** (250K or 500K)  
DTM Series (2 position)  
(has an orange or black wedgelock)  
Remove panel to access connector.



**Wedgelock**—see color note below.

**(P) Power, (G) Ground, (I) Ignition**

### Typical Connection Locations

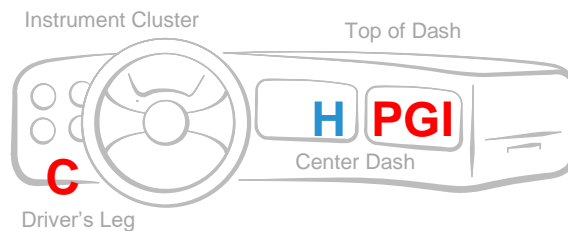

See image references below.

**Look carefully**—connectors may be hidden or wrapped in a group of wires (connectors are labeled).



**Note:** Wedgelock colors must match to connect. **If colors do not match**—remove one wedgelock from the kit harness and switch it with the wedgelock on the chassis CAN harness, then matching colors will connect.




## Freightliner – 2020–2022 (M2 114)

(H) Hub/Bridge typical mounting location

### Chassis CAN and Power Connections:

**(C) CAN: J1939 (250K)**  
DTM04-2P/DTM06-2S Connector

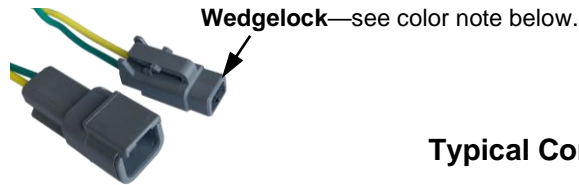

**(P) Power, (G) Ground, (I) Ignition**  
Splice Block, possible Terminals (if needed, replace existing terminal with appropriate terminal shown)




12110844-L  
IGN and GND



12191818-L BATT

### Typical Connection Locations

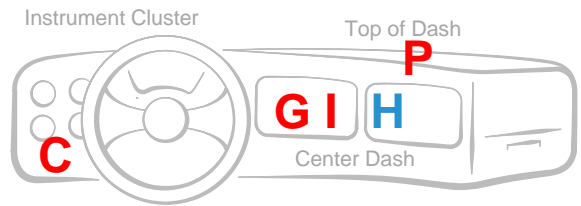

Driver's Leg

See image references below.

**Look carefully**—connectors may be hidden or wrapped in a group of wires (connectors are labeled).



**Note:** Wedgeloock colors must match to connect. **If colors do not match**—remove one wedgeloock from the kit harness and switch it with the wedgeloock on the chassis CAN harness, then matching colors will connect.

# Freightliner/Western Star – 2023 or newer

**(H) Hub/Bridge** typical mounting location

**Chassis CAN and Power Connections:**

**(C) CAN: SCAN** (500K)  
RP1226 Connector




**(P) Power, (G) Ground, (I) Ignition**

APTIV 10757692  
Terminal




## Typical Connection Locations

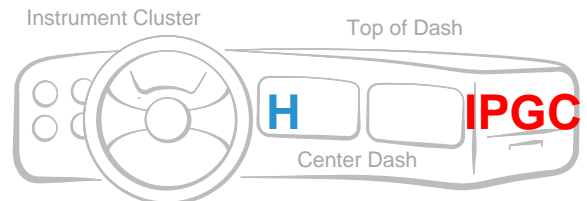

Driver's Leg


See image references below.

**Look carefully**—connectors may be hidden or wrapped in a group of wires (connectors are labeled).

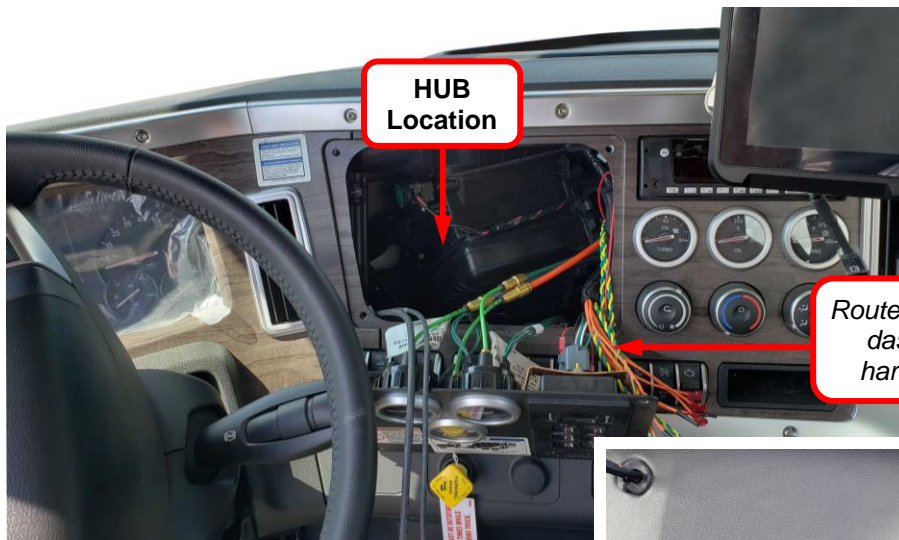

**HUB  
Location**

*Route HARN-PWR-003 wires through dash to HUB, see below to plug harness into chassis connection.*

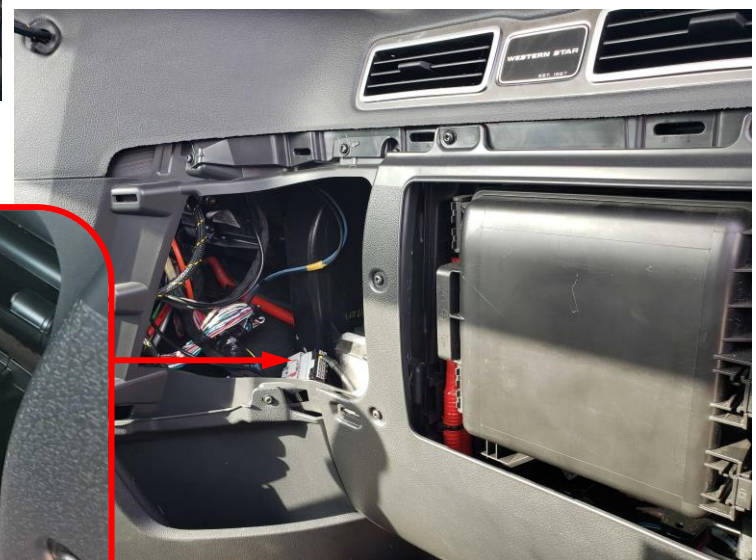

**Constant Battery, Ignition, Ground and CAN Connector**  
*Unplug chassis connector then plug both ends into HARN-PWR-003.*





## International HX – 2022 or newer

**(H)** Hub/Bridge typical mounting location

**Chassis CAN and Power Connections:**

**(C)** CAN: VCAN (500K)

Delphi/Aptiv  
(2 position)



**(P)** Power, **(G)** Ground, **(I)** Ignition

Splice Block, possible Terminals (if needed, replace existing terminal with appropriate terminal shown)

Female Terminal  
(GEN-101)  
BATT and IGN




Terminal to  
Splice Block  
GND



### Typical Connection Locations

On this Model,  
**CAN Connection**  
is commonly found  
under the hood.

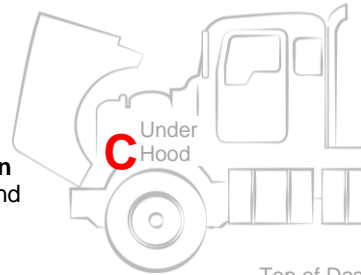


See image references below.

**Look carefully**—connectors may be hidden or wrapped in a group of wires (connectors are labeled).

**CAN Connection** – Open hood to engine; look for CAN on driver's side near the front of the truck.

**Ignition, Power, and Ground** – Connections found in dash; open dash panel indicated below.

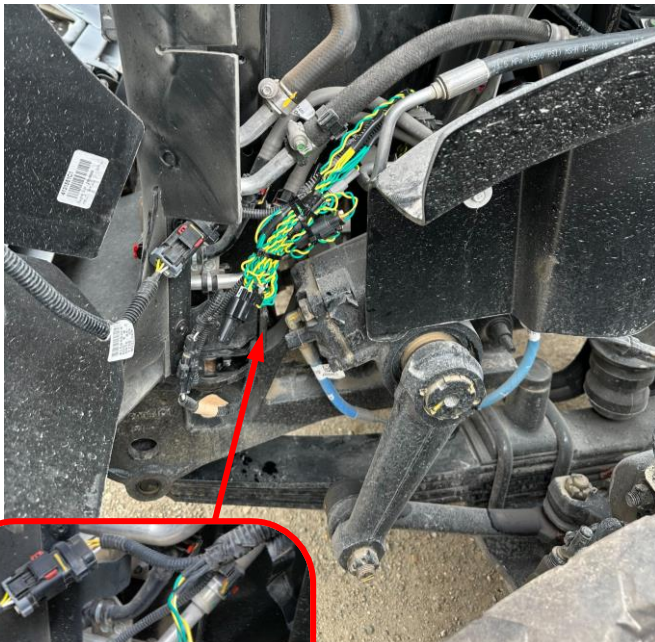


Unplug terminating resistor from **Chassis CAN connector**, then plug **both ends** into HARN-CAN-001.

Plug remaining **non-used** harness pairs together to prevent water intrusion.

**Ignition and Power**  
Lift fuse panel to locate wires labeled **IGN** and **PWR**.

**Ground Connection**  
Splice block located under fuse panel.

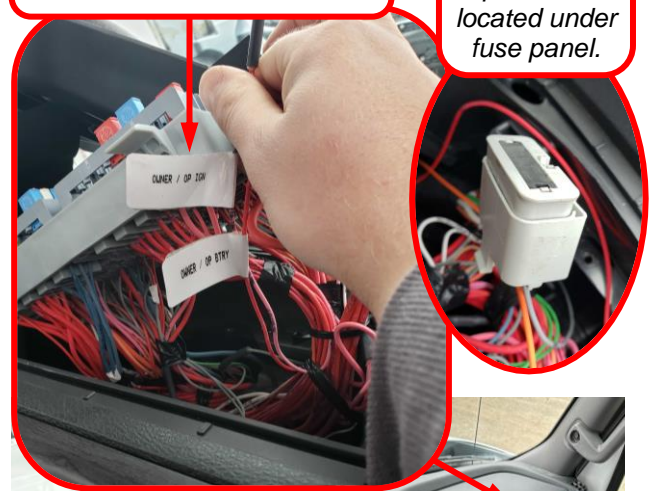

**IMPORTANT:** After installing the **CAN Harness**, wire tie the harness wires and ends together for protection.

# Front Discharge Mixer

**Terex Advance – 2019 or newer**


*Confirm you have correct truck view, see note below.*

**(H) Hub/Bridge** typical mounting location.

**Chassis and Mixer CAN and Power Connections:**

**(C<sub>C</sub>) Chassis CAN:**  
C74/75 (500K, CAN1)

**(C<sub>M</sub>) Mixer CAN:**  
C39/40 (250K, CAN2)

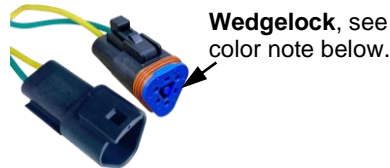


DT04-3P/DT06-3S Connectors (has a blue or green wedgelock)

**(P) Power, (G) Ground, (I) Ignition**  
Terminal/Stud  
(uses 3/8" ring and 1/4" ring)



## Typical Connection Locations

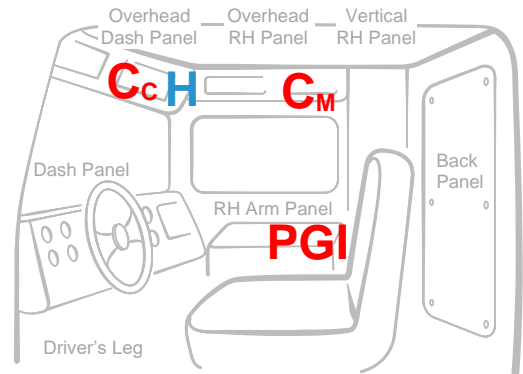

See image references below.

**Important Note:** If truck does not have a built-in screen to show drum speed and direction, refer to Terex 2016–2019, or Terex 2016 or older.

**Look carefully**—connectors may be hidden or wrapped in a group of wires (connectors are labeled).

*There can be an alternate location for **Chassis CAN, C74** (in overhead side panel, see below). In this case—remove terminating resistor, then connect HARN-CAN-003 to C74, **put the terminating resistor cap on the open end of the Y harness.***

*Remove terminating resistor from **Chassis CAN, C74.***

*Then, connect HARN-CAN-003 to C74—**put the terminating resistor cap on the open end of the Y harness.***

*Remove terminating resistor from **Mixer CAN (C39)**, then connect HARN-FLEX-001 to C39—**put the terminating resistor cap on the open end of the Y harness.***

**Constant Battery, Ground, & Ignition Connections**

**Note:** Wedgelock colors must match to connect. **If colors do not match**—remove one wedgelock from the kit harness and switch it with the wedgelock on the chassis CAN harness, then matching colors will connect.




## Terex Advance – 2016–2019 (no Mixer CAN)

Confirm you have correct truck view, see below.

(H) Hub/Bridge typical mounting location.

### Chassis CAN and Power Connections:


**(C) CAN: C64/65**  
(J1939 Backbone)  
DT04-3P/DT06-3S Connectors  
(has a blue or green wedgelock)

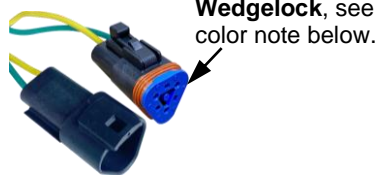

**(P) Power, (G) Ground, (I) Ignition**  
Terminal/Stud (uses 3/8" ring and 1/4" ring)



### Typical Connection Locations

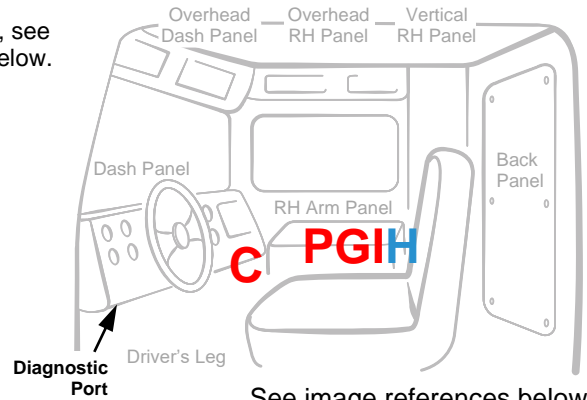

See image references below.


### Confirm this is Correct Truck View:

- Does truck have a built-in screen?  
**Yes** – See Terex, 2019 or newer  
**No** – Go to next step.
- Is diagnostic port located under dash at driver's left leg?  
**Yes** – Go to next step.  
**No** – See Terex, 2016 or older
- Is the diagnostic port green?  
(Remove any port cover or splitter to check the actual port color.)  
**Yes** – This is the correct truck view, look for a blue CAN connector, see images below.  
**No** – See Terex, 2016 or older

**Look carefully**—connectors may be hidden or wrapped in a group of wires (connectors are labeled).



Remove terminating resistor from **Chassis CAN (C64)**, then connect HARN-CAN-003 to C64—put the terminating resistor cap on the open end of the Y harness.

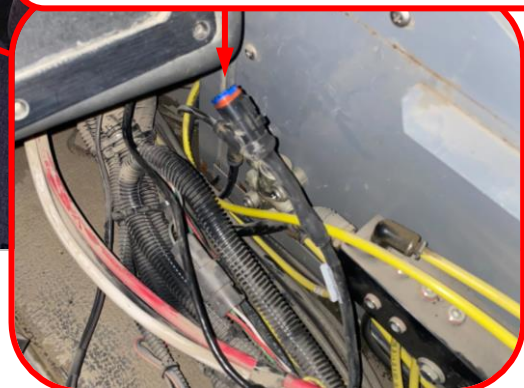

**Note:** Wedgelock colors must match to connect. **If colors do not match**—remove one wedgelock from the kit harness and switch it with the wedgelock on the chassis CAN harness, then matching colors will connect.



## Terex Advance – 2016 or older (no Mixer CAN)

Confirm you have correct truck view, see below.

**(H) Hub/Bridge** typical mounting location.


### Chassis CAN and Power Connections:

**(C) CAN:** use **Diagnostic Port**  
(use HARN-BLK-OBD-J1939 to connect to diagnostic port)

**(P) Power, (G) Ground, (I) Ignition**  
Terminal/Stud (uses 3/8" ring and 1/4" ring)



### Typical Connection Locations

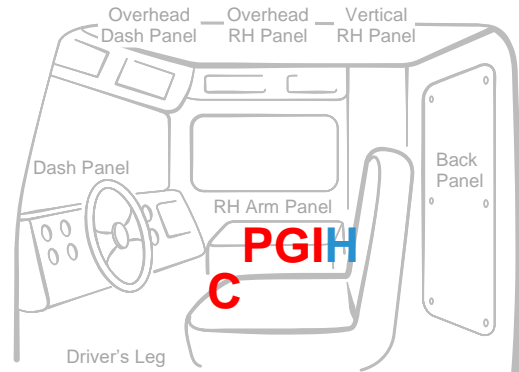


See image references below.

### Confirm this is Correct Truck View:

1. Does truck have a built-in screen?  
**Yes** – See Terex, 2019 or newer  
**No** – Go to next step.
2. Is diagnostic port located on side panel at driver's right leg?  
**Yes** – Go to next step.  
**No** – See Terex, 2016-2019
3. Is the diagnostic port black?  
*(Remove any port cover or splitter to check the actual port color.)*  
**Yes** – This is the correct truck view, use the diagnostic port for CAN connection, see images below.  
**No** – See Terex, 2016-2019

**Look carefully**—connectors may be hidden or wrapped in a group of wires (connectors are labeled).

### Constant Battery, Ignition, and Ground Connections

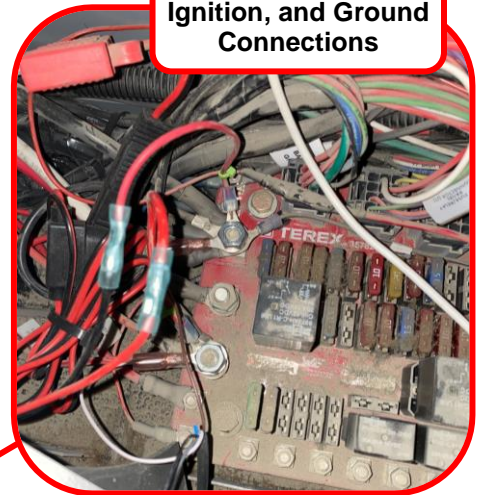

**Chassis CAN Connection**—use the **diagnostic port** and plug in HARN-BLK-OBD-J1939.

**If port is in use** (or used by service technicians) request splitter (DF-INV-030) to keep the port available when the OBD harness is plugged in.


# Oshkosh S Series Flex 2.0

Confirm you have correct truck view, see note below.

## (H) Hub/Bridge typical mounting location

### Chassis and Mixer CAN and Power Connections:

**(C<sub>CM</sub>) CAN: C14F/C14M** (Chassis/Mixer, 500k)  
DT06-3S/DT04-3P Connectors  
(has a blue or green wedgelock)

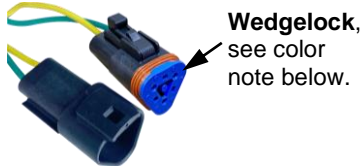


**Wedgelock,**  
see color  
note below.

**(P) Power, (G) Ground, (I) \*Ignition**

\*Female Terminal  
(GEN-101)



## Typical Connection Locations

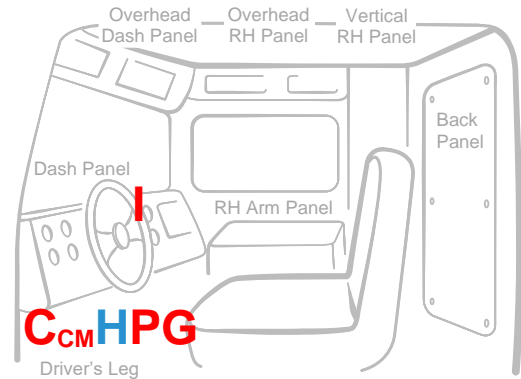


See image references below.

**Important Note:** If truck does not have a built-in screen to show drum speed and direction, refer to Oshkosh S Series Non Flex or Glider (no Chassis/Mixer CAN).


**Look carefully**—connectors may be hidden or wrapped in a group of wires (connectors are labeled).

**CAN Bus** can provide Washout, Water Add, Slump, and Drum connections.

Remove terminating resistor from **Chassis/Mixer CAN (C14F)**, then connect HARN-CAN-003 to C14F—**put the terminating resistor cap on the open end of the Y harness.**

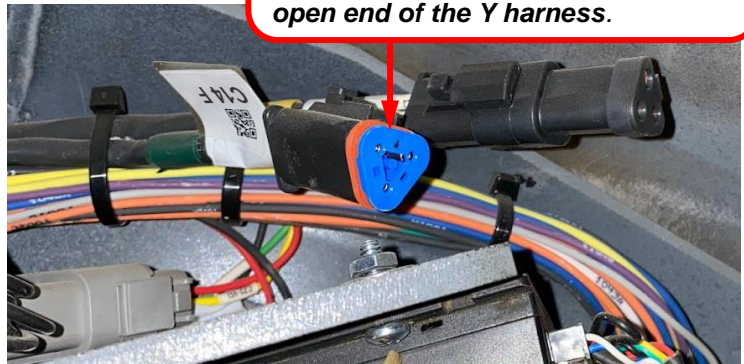

**CAN Bus Connector**—use:  
pos. 6 (**Constant Power**, red),  
pos. 3 (**Ground**, black)

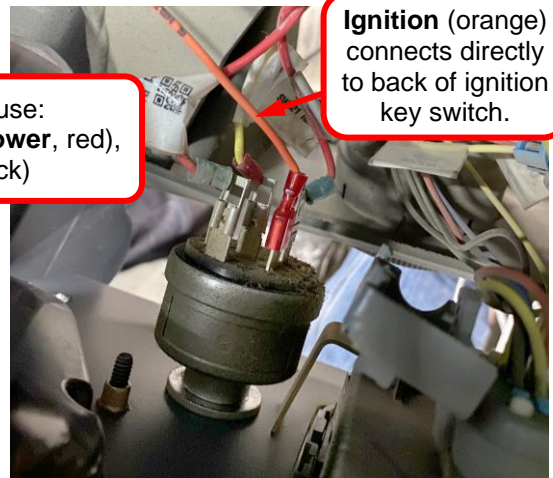

**Ignition** (orange) connects directly to back of ignition key switch.

**Note:** Wedgelock colors must match to connect. **If colors do not match**—remove one wedgelock from the kit harness and switch it with the wedgelock on the chassis harness, then matching colors will connect.



# Oshkosh S Series Non Flex – (no Mixer CAN)


Confirm you have correct truck view, see note below.

## (H) Hub/Bridge typical mounting location

### Chassis CAN (250K or 500K) and Power Connections:

**(C) CAN:** (250K) – generally Model years 2008–2013  
(500K) – generally Model years 2014–2019

DT06-3S Connectors (has a blue or green wedgelock)

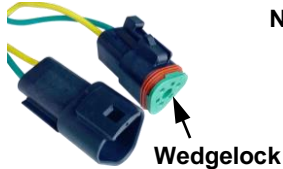

Wedgelock


**Note:** Wedgelock colors must match to connect. **If colors do not match**—remove one wedgelock from the kit harness and switch it with the wedgelock on the chassis harness, then matching colors will connect.

**(P) Power, (G) Ground, (I) Ignition**

Terminal/Stud (uses 3/8" ring and 1/4" ring)



## Typical Connection Locations

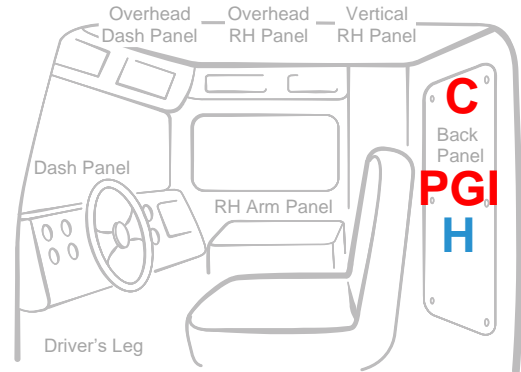

See image references below.

**Important Note:** If truck has a built-in screen to show drum speed and direction, refer to Oshkosh S Series Flex 2.0.

**Look carefully**—connectors may be hidden or wrapped in a group of wires (connectors are labeled).

### Locate the Chassis CAN Connection:



Truck has **either** a 6-way or 3-way (order your harness kit accordingly).

1. Find the CAN connection—see Figure A for typical location.
2. If CAN connection not seen at the typical location, see Figure B.
3. If CAN connector is **NOT plugged in** at all, refer to next page for Glider (no Chassis CAN).


**Figure A: 6-way Chassis CAN Connector**—If 6-way bus not plugged in here, see Figure B for 3-way Gray Splitter.



**Figure B: 3-way Gray Splitter** (for harness information, see below)

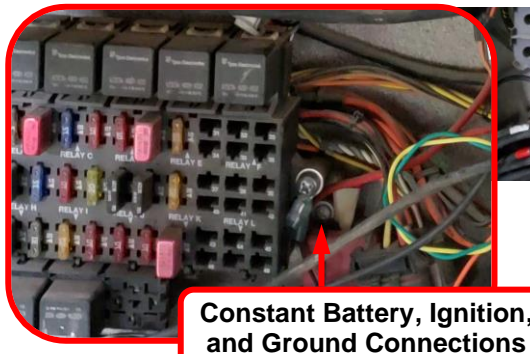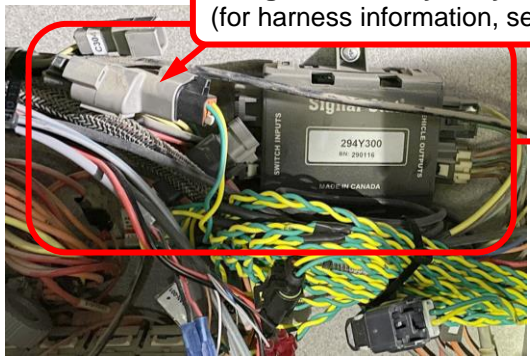

**Constant Battery, Ignition, and Ground Connections**

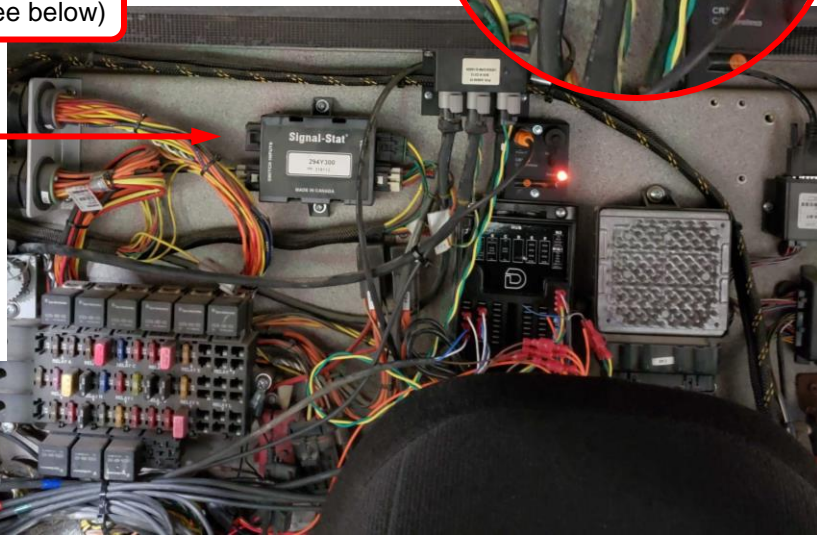

### Trucks using a 3-way Gray Splitter:

Sometimes, the S Series Non Flex has a 3-way gray splitter instead of the 6-way. In this case, request the HARN-CAN-003 harness to make the connection.

For harness request, please call DF+ Support at 630.518.4606.



## Oshkosh S Series Non Flex – Glider (no Chassis/Mixer CAN)

Confirm your truck view, see note below.

### Glider Information:

Glider is a truck with mismatched years of components, parts may be rebuilds and system communication (J1708/CAN) may be limited or non-existent.

1. This page is for a Glider **without** chassis CAN, see images and instructions below.
2. For a Glider **with** chassis CAN connected (either a 6-way or 3-way connection), see previous page Oshkosh S Series Non Flex for instructions.
3. If you believe your truck is a glider and you need further information, contact DF+ Support at 630.518.4606.

### (H) Hub/Bridge typical mounting location

**CAN:** This page covers a Glider **without** Chassis/Mixer CAN

### Power Connections:

**(P) Power, (G) Ground, (I) Ignition**


Terminal/Stud (uses 3/8" ring and 1/4" ring)




### Important Note:

- If truck has a built-in screen to show drum speed and direction, refer to Oshkosh S Series Flex 2.0.
- If truck has a chassis CAN connection plugged in, refer to previous page, Oshkosh S Series Non Flex.

### Typical Connection Locations

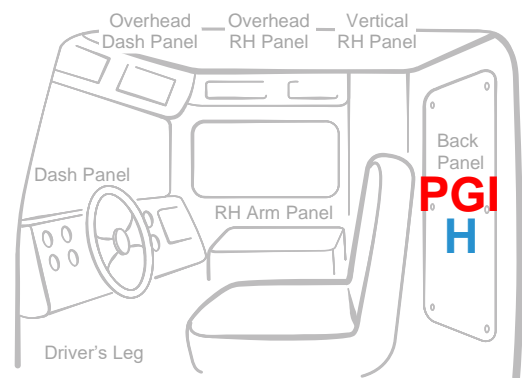

See image references below.

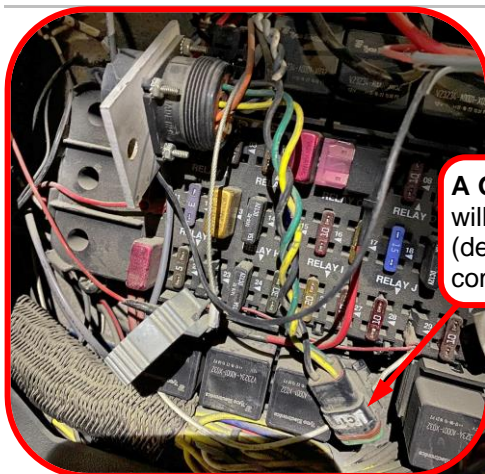

**A Glider without Chassis CAN** will **not** have CAN connected (dead end connector, no communication with chassis).

**If the Glider has chassis CAN connected** (example shown below), refer to previous page, Oshkosh S Series Non Flex, for instructions.



**Constant Battery, Ignition, and Ground Connections**

**Look carefully**—connectors may be hidden or wrapped in a group of wires (connectors are labeled).

